



The main control panel features several rows of buttons. The top row includes: 台式机 (Desktop), 笔记本VGA (Laptop VGA), 笔记本HDMI (Laptop HDMI), 互动网关 (Interactive Gateway), and 备用源 (Backup Source). The second row includes: 投影机开关 (Projector On/Off), 大屏开关 (Big Screen On/Off), 显示器HDMI (Monitor HDMI), 一键切换 (One-click Switch), 显示器VGA (Monitor VGA), 录像开始 (Recording Start), and 录像暂停 (Recording Pause). The third row includes: 静音 (Mute), 音量 (Volume), 一键闭源 (One-click Close Source), 全屏 (Full Screen), 上一步 (Previous), and 下一步 (Next). A volume control bar is located at the bottom left of the panel.

Callouts and their corresponding buttons:

- 设备开关键 (Device On/Off Key) points to the 台式机 button.
- 音量大小键 (Volume Control Key) points to the 音量 button.
- 信号切换键 (Signal Switch Key) points to the 互动网关 button.
- 录制课堂键 (Recording Classroom Key) points to the 录像开始 button.
- 信号显示键 (Signal Display Key) points to the 全屏 button.

